



escaperoomshop.it

props & puzzle

Rotary Phone WiFi by escaperoomshop.it © 2024

software version: 4.0wifi

date: 02/01/2024

Features

- 5V USB power supply (use a phone charger or power bank)
- 12 storable records
- maximum number length: 9 digits
- file supported: .mp3
- sd card capacity: 8gb

Operation

- pick up the handset and wait for the dial tone
- dial the number and listen to the recorded message

Uploading the message

- the messages are saved in the MP3 folder of the SD card
don't change folder name, don't delete the other files*
- remove power first
- remove the two screws from bottom to open the phone
- remove the SD card from the slot and insert it in a PC (just push, don't lift it up!)
- rename your file from "0001.mp3" to "0012.mp3"
- replace it in the "MP3" folder
- close the phone by holding it upside down

01 folder

- 001.mp3 - on line*
- 002.mp3 - call*
- 003.mp3 - wrong/busy*
- 004.mp3 - tone*

MP3 folder

- 0001.mp3 - rec 1 - relay (optional)
- 0002.mp3 - rec 2
- 0003.mp3 - rec 3

- 0004.mp3 - rec 4
- 0005.mp3 - rec 5
- 0006.mp3 - rec 6
- 0007.mp3 - rec 7
- 0008.mp3 - rec 8
- 0009.mp3 - rec 9
- 0010.mp3 - rec 10
- 0011.mp3 - rec 11
- 0012.mp3 - rec 12

Numbers programming

- pick up the handset and wait for the on line tone
- Use a smartphone or tablet and follow the instructions below



Connection:

Place your smartphone near the Rotary Phone and connect it to the WiFi access point

Scan the QR code or log in manually

ssid: **escaperoomshop**

pw: **12345678**


wait a few seconds for the connection to become stable

! it is advisable that there is no WiFi nearby



Once connected, scan the QR code or browse the following address:

192.168.4.1

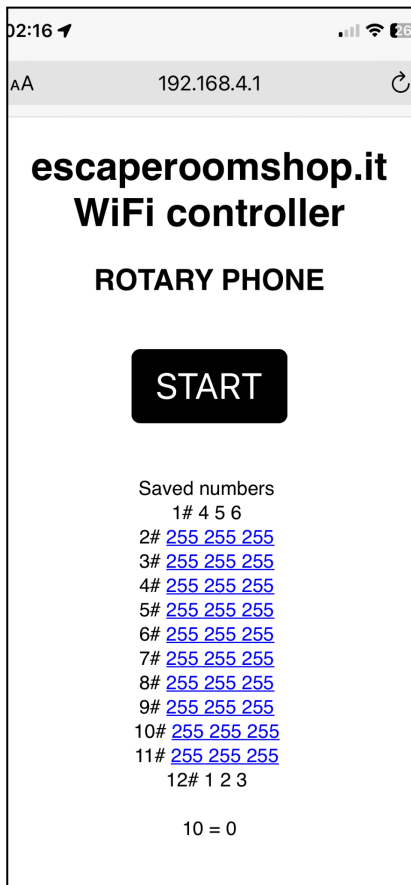


This page will open

If the page does not open, check the connection again

The list of saved numbers will be displayed

The number 10 represents 0

Tap on **START**

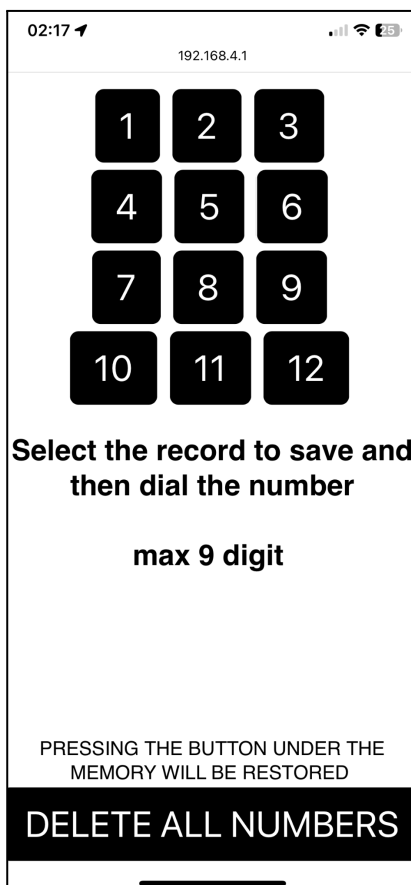


This page will open and you will hear the busy sound from the handset

Select the record to save, tap a number from 1 to 12

Record 1 is connected to the remote relay (follow instructions provided)


Here you can also delete all record saved and restore memory

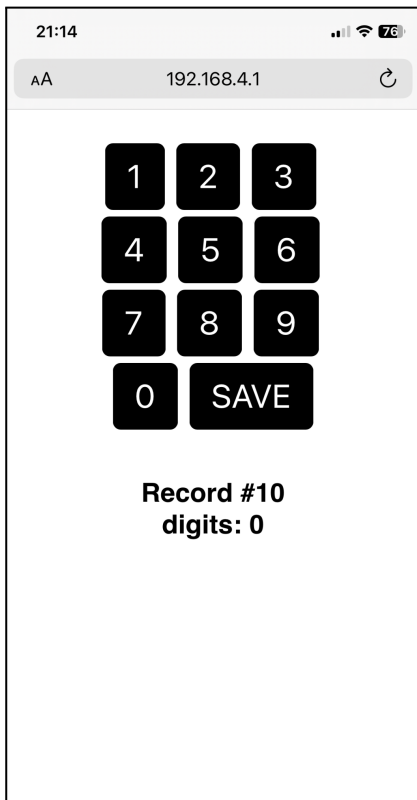

This page will open

Dial the number, you will hear a tone from the handset for each key pressed.


Press the next key after the sound ends.

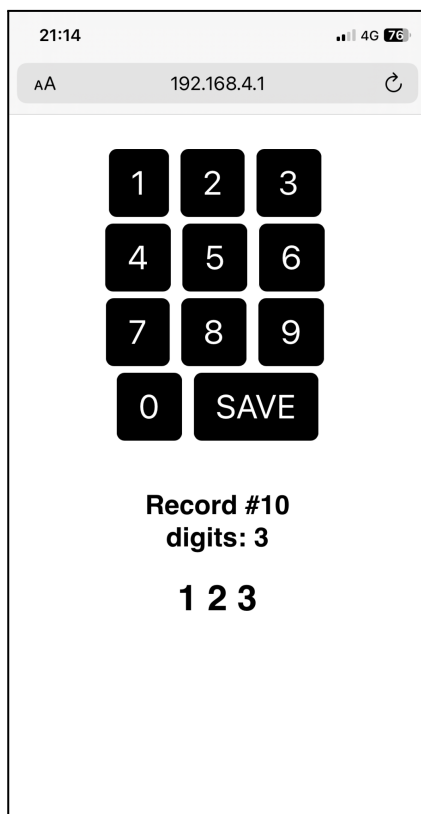

The selected numbers will be displayed.

Important: all the records must have the same length

Tap on **SAVE** to store the record

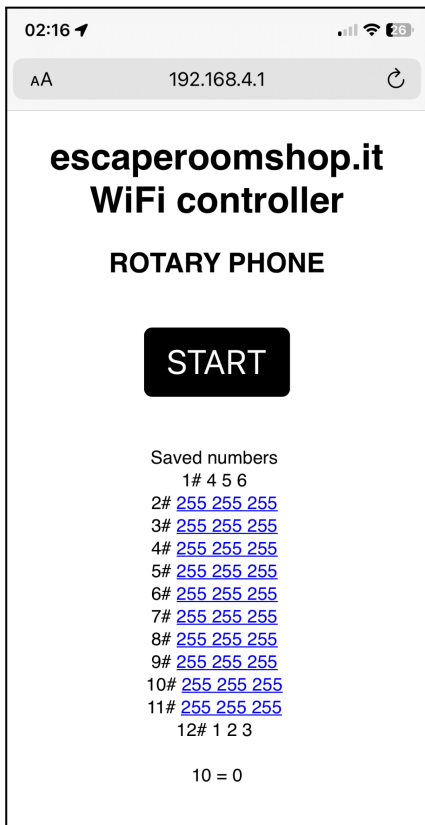

You will return to the previous page
and the updated list will be displayed
with the new saved number

Wait for the phone to reset

Tap on **START** again for a new record

Warnings

- use indoors only
- do not install in damp places
- do not use solvents to clean

Warranty

- The items are covered by the warranty of 6 months from the date of receipt of the goods.
- Are offered repair and / or free replacement in case of malfunction, shipping costs are excluded.
- Objects are not covered by warranty due to misuse, accidental fall, contact with liquids, overvoltage or short circuit.