

escaperoomshop.it

props & puzzle

Sirio Phone X10 by escaperoomshop.it P2023

software version: x10

date: 03/2023

Features

Power supply 5V dc USB

maximum code length: 9 digits

file supported: .mp3sd card capacity: 8gb

Operation

- pick up the handset and wait for the dial tone
- dial the number
- listen to the recorded message
- use the * or # key to delete all number dialed

Code programming

- pick up the handset and wait for the dial tone
- press the mem button once under the phone using a toothpick
- select the record to save (from 0 to 9) then press the # key
- dial the number (no hurry)
- hang up
- new code was programmed
- IMPORTANT: ALL NUMBERS MUST BE THE SAME LENGTH

Uploading the message

- open the phone by removing 6 screws from the bottom
- push to remove the SD card from the board
- insert the SD card in a pc slot using the provided adapter
- rename your file according to the list
- replace it in the "MP3" folder (don't change folder name)
- DO NOT DELETE OTHER FILES

MP3 FOLDER

 0001.mp3 0002.mp3 0003.mp3 0004.mp3 0005.mp3 0006.mp3 	CALLING TONE KEY TONE WRONG NUMBER (busy) ON LINE TONE SERVICE MESSAGE 1 SERVICE MESSAGE 2	DO NOT DELETE THIS FILES
 0007.mp3 Record # 1 0008.mp3 Record # 2 0009.mp3 Record # 3 0010.mp3 Record # 4 0011.mp3 Record # 5 0012.mp3 Record # 6 0013.mp3 Record # 7 0014.mp3 Record # 8 0015.mp3 Record # 9 0016.mp3 Record # 0 		

Hard reset

To delete all stored numbers:

- hang up the handset
- hold down the **mem** key and lift the handset
- release the key and hang up

Warnings

Use indoors only. Do not install in damp places.

Warranty:

The items are covered by the warranty of 6 months from the date of receipt of the goods. Are offered repair and / or free replacement in case of malfunction, shipping costs are excluded. Objects are not covered by warranty due to misuse, accidental fall, contact with liquids, overvoltage or short circuit.