



escaperoomshop.it

props & puzzle

Piano Prop WiFi v02 by escaperoomshop.it ©2025



Connection:

Place your smartphone near the device and connect it to the WiFi access point

Scan the QR code or log in manually

ssid: **escaperoomshop**

pw: **12345678**

wait a few seconds for the connection to become stable


! it is advisable that there is no WiFi nearby



Once connected, scan the QR code or browse the following address:

192.168.4.1

Turn your phone horizontally

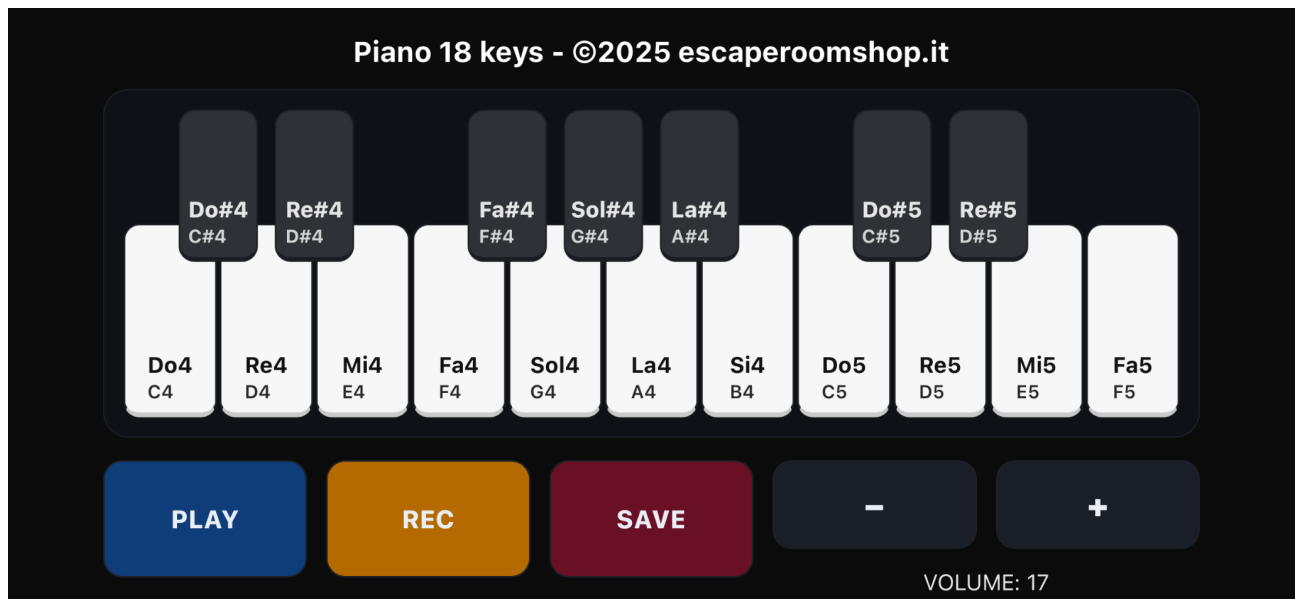

This page will open
(if the page does not open, check the connection again)

Tap **PLAY** to play the saved melody
The top lid will open at the end

Tap **REC** to play a new melody
You can play it on your phone or directly from the piano

Tap **SAVE** to save the melody you just played

You can adjust the volume by tapping **-** and **+** (range 1 - 30)

Alternative way to save the melody

Swipe a magnet on the spot on the bottom panel
Play the melody on the piano
Swipe the magnet again to save the melody



escaperoomshop.it

props & puzzle

Piano Prop WiFi v02 by [escaperoomshop.it](https://www.escaperoomshop.it) ©2025

date: AUG/2025

Power supply: 5V dc USB

Remote controller: press button _____ to open the top lid

!!! DO NOT PRESS FOR MORE THAN 1 SECOND !!!

Warnings

- use indoors only
- do not install in damp places
- do not open the box if not necessary
- do not use solvents, clean with a dry cloth

Warranty

- The items are covered by the warranty of 6 months from the date of receipt of the goods.
- Are offered repair and / or free replacement in case of malfunction, shipping costs are excluded.
- Objects are not covered by warranty due to misuse, accidental fall, contact with liquids, overvoltage or short circuit.

Contact

- escaperoomshop.it@gmail.com
- <https://www.facebook.com/escaperoomshop/>