


escaperoomshop.it

props & puzzle

Lightning & Thunder ©2024 escaperoomshop.it

Power supply: 5V USB

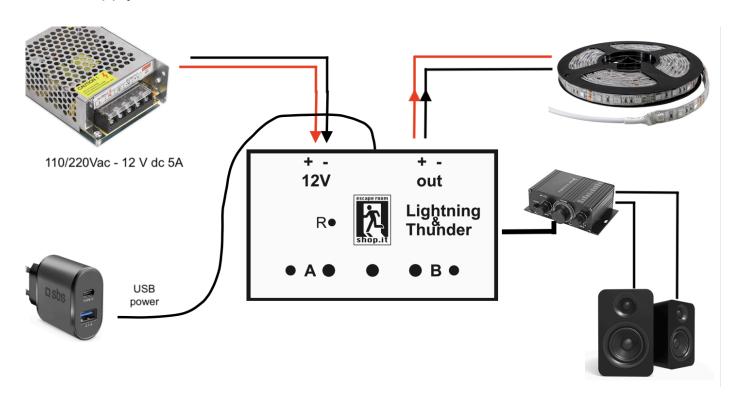

Connections:


USB 5V power supply input

in 12/24 V DC light power supply


out LED strip output (use 6400K LED strip)

3,5 jack stereo out (connect to an amplifier or powered speakers)


How the device works

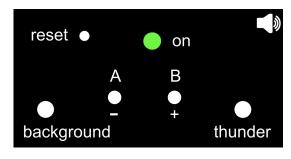


Connect the USB cable into a USB power source
The green LED will light up

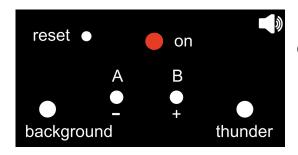

If the LED lights up red, check if the SD card is inserted correctly

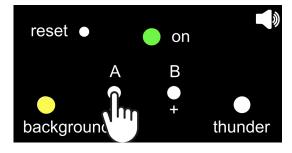


Press the A button to start the background sound
The yellow LED will light up

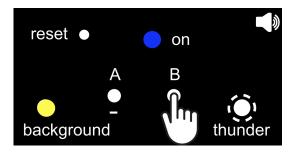

Press the B button to start the lightning and thunder effect
The green LED will turn blue
The lightning effect will be displayed on the white LED

Press A or B anytime to stop the effects


SETUP A voice guide will assist you in this phase (Use a toothpick for this operation)

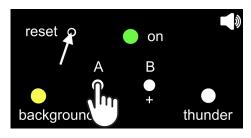

Background volume

Hold down the A button and press the reset button Release the A button as soon as the yellow LED lights up

Adjust the volume with the A (-) and B (+) buttons

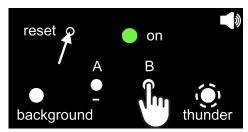


Thunder volume

Hold down the B button and press the reset button Release the B button as soon as the white LED lights up

Adjust the volume with the A (-) and B (+) buttons


Press the reset button to make the setting effective

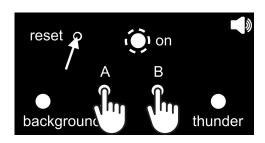

Lightning Settings


Hold down the A and B buttons at the same time and press the reset button

Release the A and B buttons as soon as the green LED turns white

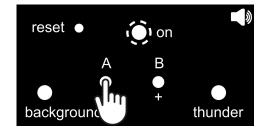

Use button A to select the functions to set:


- minimum loop delay
- maximum loop delay
 Sets the random delay between lightning events (1 60 sec)
- minimum flash count
- maximum flash count
 Set the random number of flashes for each event (1 60)

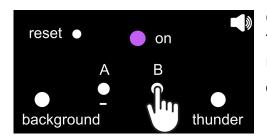

Confirm the function to be set with the B button The white LED will turn purple Use the A (-) and B (+) buttons to increase or decrease the value

Press the reset button to make the setting effective

Serial Monitor

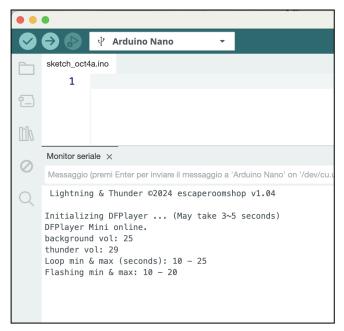

By connecting the device to a PC and running a serial monitor software, you can view the functions and processes in progress.

Recommended for expert users only Contact us for more information

SD card contents

01 - 0001.mp3 background file (you can change this file if you need)

02 - 0001.mp3 - 0060.mp3 voice numbers

03 - 0001.mp3 - 0008.mp3 voice assistant

MP3 - 0001.mp3 - 0020.mp3 thunder sounds

Warnings

use indoors only
do not install in damp places
do not open the box if not necessary
do not use solvents, clean with natural wax

Warranty

The items are covered by the warranty of 6 months from the date of receipt of the goods.

Are offered repair and / or free replacement in case of malfunction, shipping costs are excluded.

Objects are not covered by warranty due to misuse, accidental fall, contact with liquids, overvoltage or short circuit.

Contacts

<u>escaperoomshop.it@gmail.com</u> <u>www.facebook.com/escaperoomshop</u>



https://wa.me/393403977194